AS-61WL / RC-603WL antenna switch

Operation Manual



V. 1.3



AS-61WL / RC603WL

Automatic Antenna Switch 6x3

The AS-61WL/RC-603WL is an automatic antenna switch for three radios and six antennas. There are two independent boxes, one for the antenna switch that is near the antennas, AS-61WL, and another box with the Push Buttons for the selection of the antennas and the Radios, RC-603WL that is next to the Radio. The connection between the two boxes is only made with the RF cable (RG-58 or RG-213). This cable takes RF, power and the necessary commands for the perfect operation of this system. The RC-603WL also allows the insertion of a linear amplifier or a wattmeter, or both. In this way these equipment will always be connected with the Radio and the antenna selected. The operation is individual, which means that only the selected radio will have access to the antennas. Unused antennas are automatically short circuited.

To facilitate the operation, the **RC-601WL** also has a third internal switch that switches the Send commands and the Com port to the selected Radio.

The **AS-61WL / RC-603WL** supports communication with the following radios:

Icom (CI-V), **Kenwood** (RS-232), **Elecraft K3** (RS-232), **Yaesu** (RS-232) or any other Radio that uses one of these communication protocols.

Procedure for connecting the RC-603WL to the radio:

- 1- On the RC-603WL press and hold the yellow radio select Push button and turn on the RC-603WL.
- 2- Then press the white Push Button corresponds to the model of the radio that you will connect, according to the list below;
- **a- Ant 1** Push Button for **Icom** (CI-V) radios
- **Baud rate 19200**
- **b- Ant 2** Push Button for **Yaesu** type FT-817, FT-857 and others. **Baud rate 4800**
- c- Ant 3 Push Button for Yaesu type FT-1000 MP radios and others. Baud rate 4800
- d- Ant 4 Push Button for Yaesu type FT-5000 radios and others. Baud rate 4800
- e- Ant 5 Push Button for Kenwood, Elecraft, Flex Radio, and others. Baud rate 480 After the choice, the Split mode indicator LED stops blinking, this indicates the end of this procedure.

Procedure to use the AS-61WL/RC-603WL Split mode:

To use Split mode the **RC-603WL** must be connected to the radio with the proper cable.

1- Press the PTT of the radio and watch the **RC-603WL**'s Send LED indicator light up.


Then with the PTT still pressed, choose the receiving antenna. At this time the Split

indicator LED lights up.

When the PTT is released, the **RC-603WL** will switch to the chosen receiving antenna.


Each time you press the PTT it returns to the transmitting antenna.


Any change of antenna or band on the radio deactivates Split mode.

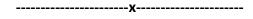



RC-603WL - IDENTIFICATION PIN



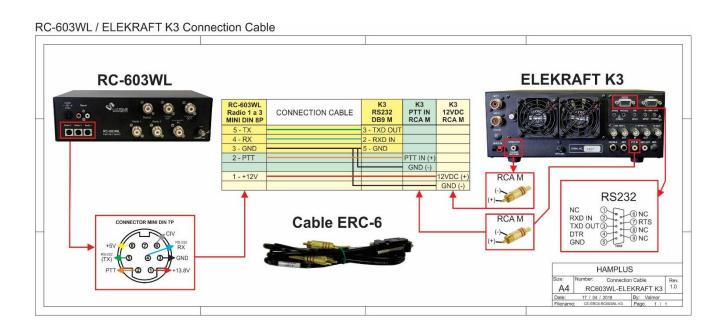


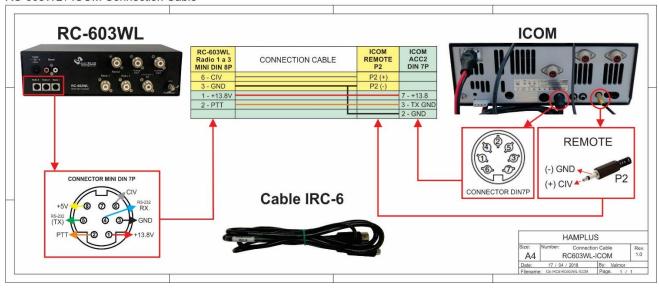

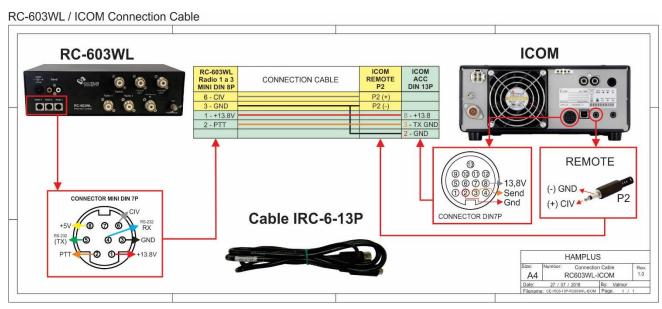

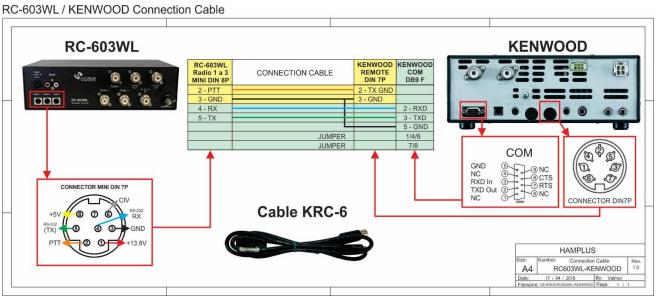

RC-603WL / YAESU Connection Cable

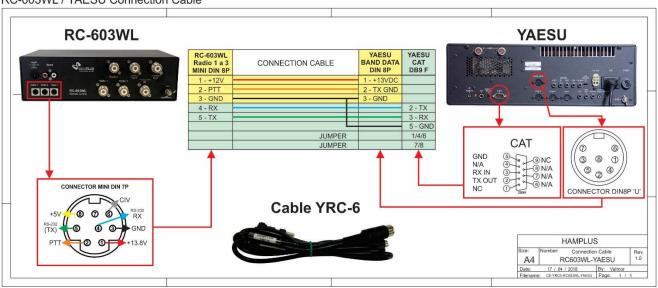

RC-603WL / YAESU-FT817 Connection Cable

